

## CHANGING YOUR CODE

### ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

- ① Enter "zero" six times.
  - ② Enter your existing six (6) digit code one time.
  - ③ Enter your NEW six (6) digit code two times.
  - ④ If a mistake is made wait thirty (30) seconds and repeat steps ① - ③.
  - ⑤ Test lock operation several times before closing the door.
- **Valid Code Entry** - Double signal after valid six (6) digit code is entered.
  - **Invalid Code Entry** - Triple signal and old code is still valid.

## BATTERY LOW WARNING

- Repeated beeping during an opening indicates that the battery is low and needs immediate replacement.
- Uses one (1) 9-Volt Alkaline Battery. LA GARD recommends the use of Duracell™ or Eveready™ Alkaline batteries. LA GARD recommends the replacement of batteries at least once annually.

*If battery is depleted and will not allow lock to open, simply follow instructions below. Lock contains a non-volatile memory, even with batteries removed the lock will retain all programming.*

## CHANGING YOUR BATTERY

- ① Slide the keypad housing up and carefully pull away from mounting surface to expose battery compartment.
- ② Remove 9-Volt Alkaline battery and replace with new one.
- ③ The connector is easily removed by unsnapping it from the two terminals on the top of the battery.

**CAUTION!** *Hold onto battery terminal to avoid pulling wires out of housing*

- ④ Carefully position the keypad over the mounting screws and slide the keypad housing down. Ensure that there are no wires or cables trapped between the input pad and the safe door. Pinched cables can result in a short circuit.

